REDSHIFT

MOUSETRAP PEDAL ADAPTERS
SPD-COMPATIBLE

INSTRUCTIONS

Check out www.redshiftsports.com/faq for the most up-to-date instructions, videos, and additional resources.

NEED HELP? Please contact Redshift Sports customer service for assistance (support@redshiftsports.com). Improper installation or use may void the product's warranty.

COMPATIBILITY


- Mousetrap Pedal Adapters work with most SPD-Compatible clipless pedals on the market.
- SPD-Compatible clipless pedals with a large surrounding platform may prevent proper installation of the Pedal Adapters. In some cases, interference between the pedals' traction pins and the underside of the Pedal Adapter can prevent installation, you may have to adjust the height of or remove the traction pins to install Pedal Adapters on these types of pedals.
- Mousetrap Pedal Adapters are not compatible with "road-style" clipless pedals such as Shimano SPD-SL, Look, Time, or Speedplay pedals.

If you are uncertain about the compatibility of your pedals, please review any compatibility notes on the Mousetrap page at www.redshiftsports.com or contact customer service at support@redshiftsports.com.

Rev. 0


INSTALLATION

NOTE: The pedal adapters are left/right interchangeable but they can only install in one front/back direction. When installed correctly, the word "FRONT" points towards the front of the bike when viewed from above.

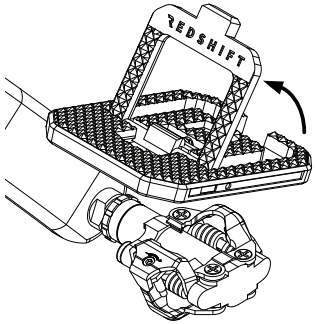


1. Open the lever by pulling upward on the tab at the front of the lever.


Note the direction of the pedal adapter (FRONT faces towards the front of the bike when viewed from above)

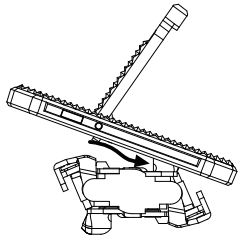

2. Install the Pedal Adapter by inserting the front tab under the clipless mechanism at the front of the pedal.

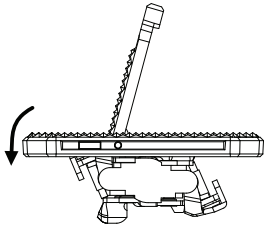

3. Lower the back of the Pedal Adapter into place such that the rear of the lever is seated in front of the rear portion of the pedal's clipless mechanism.

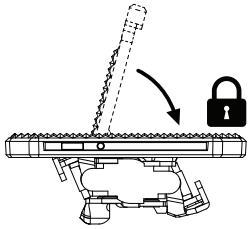

4. Gently push the lever forward and down until it snaps closed against the adapter body. NOTE: There should be no significant resistance when closing the lever, and the lever should end up flush with the pedal adapter surface when installed correctly.

REMOVAL

1. Open the lever by pulling upward on the tab at the front of the lever.
2. Lift the rear of the pedal adapter out of the pedal's clipless mechanism, then remove the front of the adapter.
3. You may need to move the adapter slightly from side-to-side to remove the front tooth from the clipless mechanism.

WARNING: DO NOT TRY AND REMOVE THE PEDAL ADAPTERS BY TWISTING THEM OFF THE PEDAL. THIS CAN RESULT IN DAMAGE TO THE PEDAL AND/OR PEDAL ADAPTER.

⚠ WARNING ⚠

- Failure to follow these instructions and warnings may result in malfunction or breakage of this component, possibly causing serious injury or death.
- Intended Use: ASTM F2043 Class 2 - For on and off-road riding and drops less than 15cm (6"). It is NOT intended for extreme off-road use or jumping.
- Before each ride, ensure the lever is closed and the pedal adapter is securely fastened to the pedal.
- Before each ride, inspect the pedals and pedal adapters for signs of damage or excessive wear.

WARRANTY

We stand behind the products we sell and want you to have an amazing experience with your Redshift components. Warranty details and return instructions for all Redshift products can be found at www.redshiftsports.com/warranty.